

FIG. 1

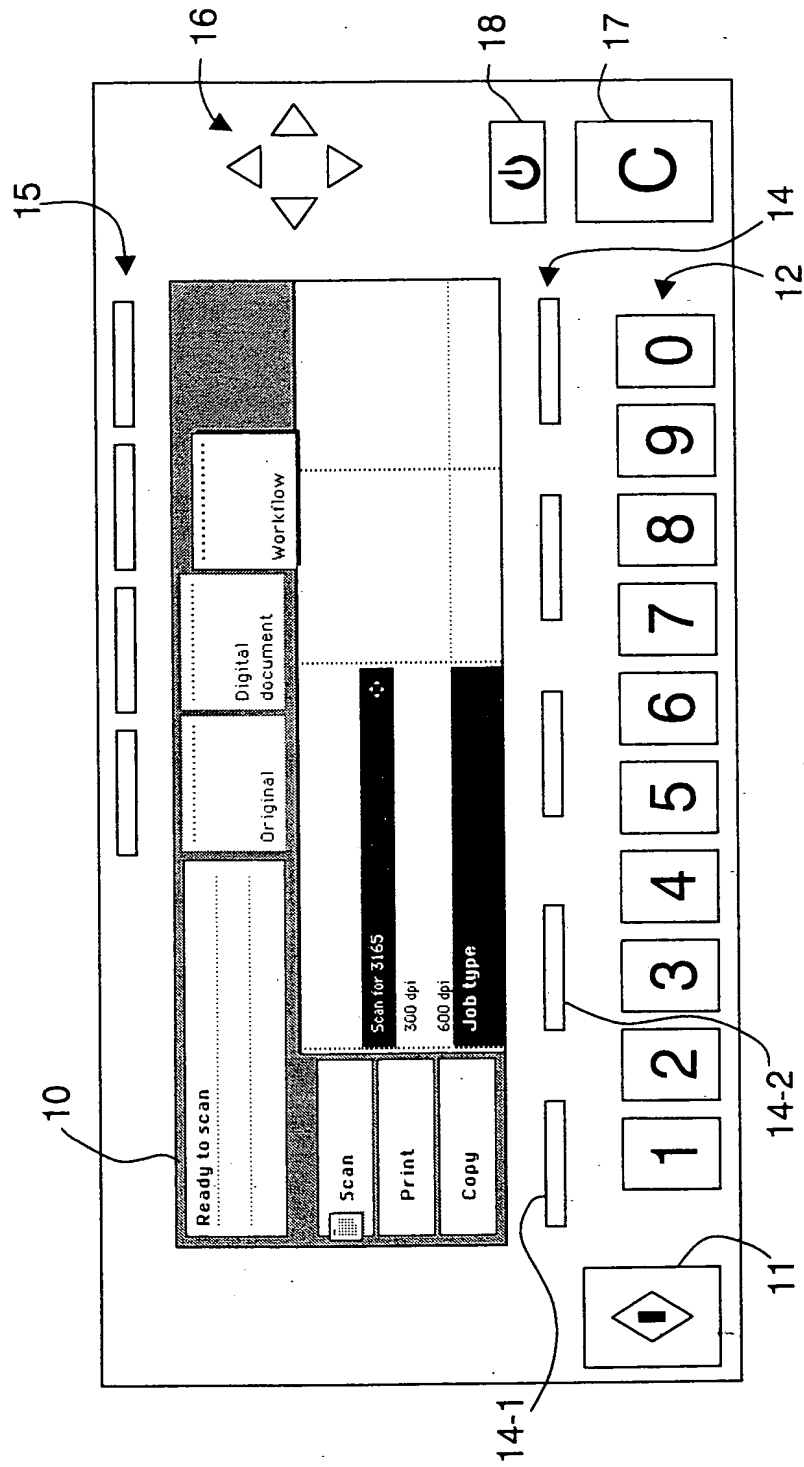
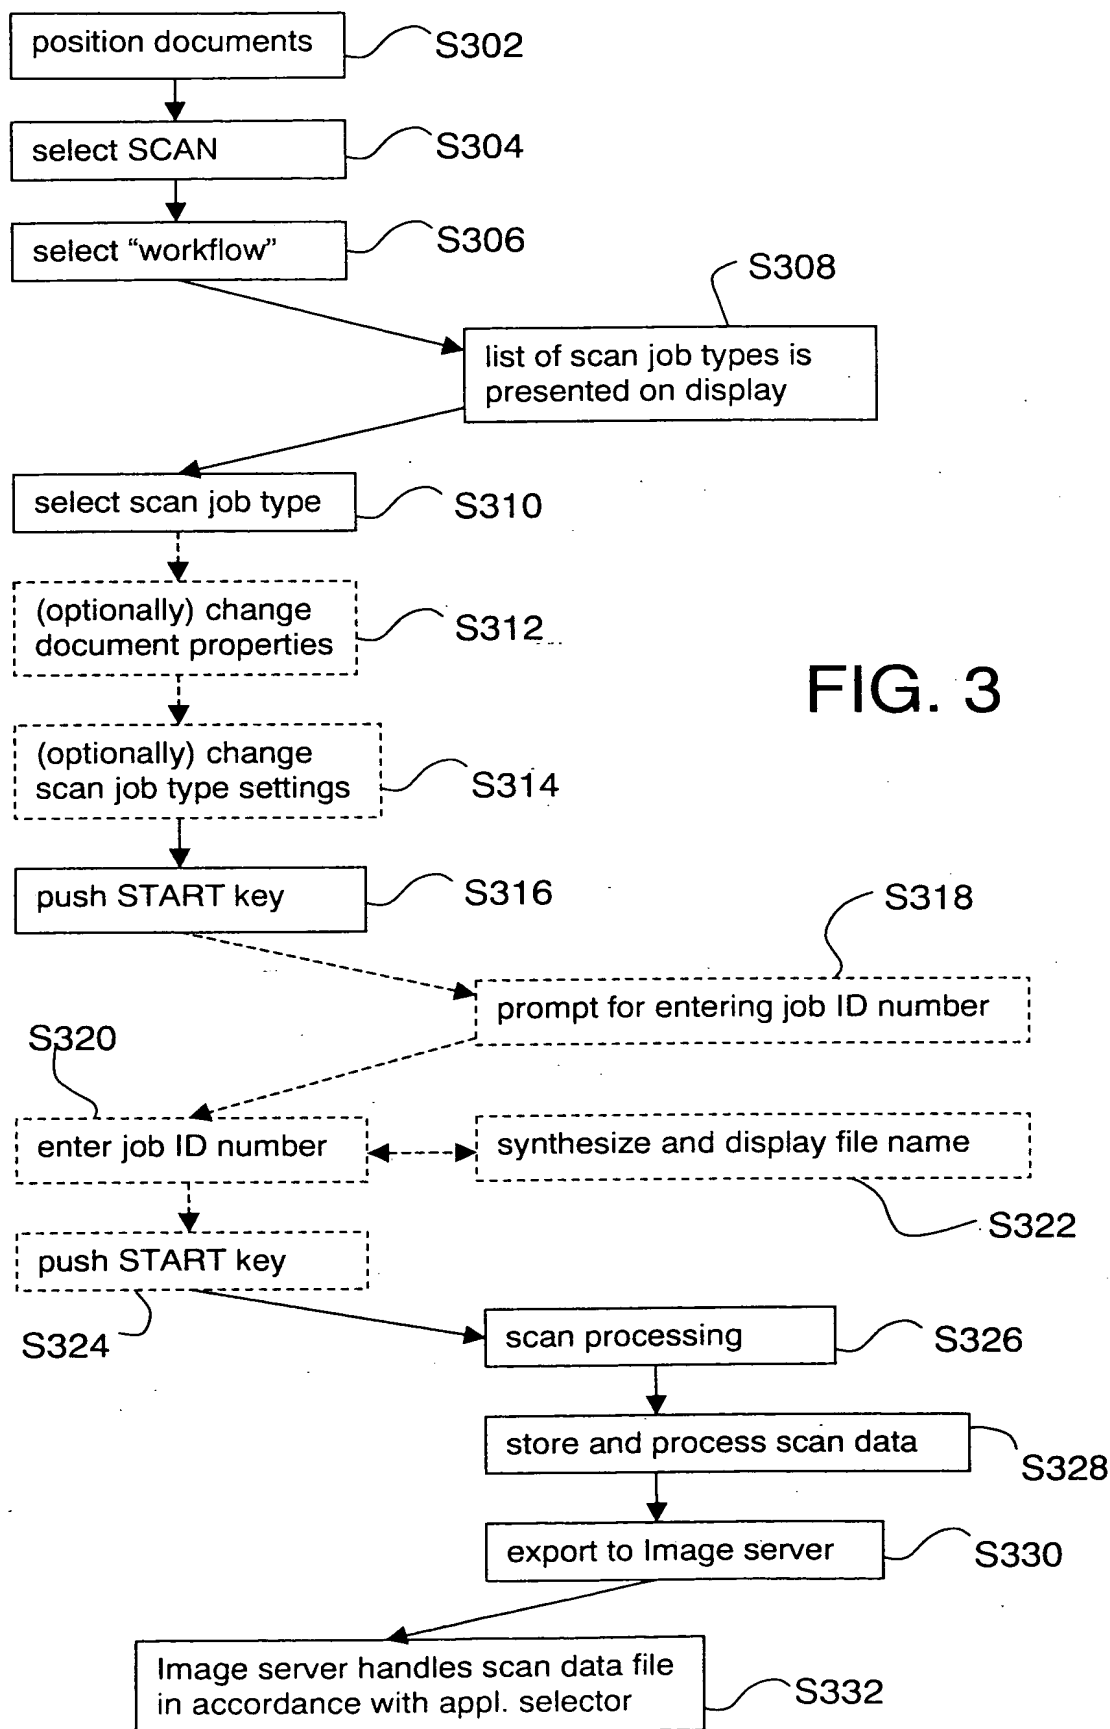


FIG. 2



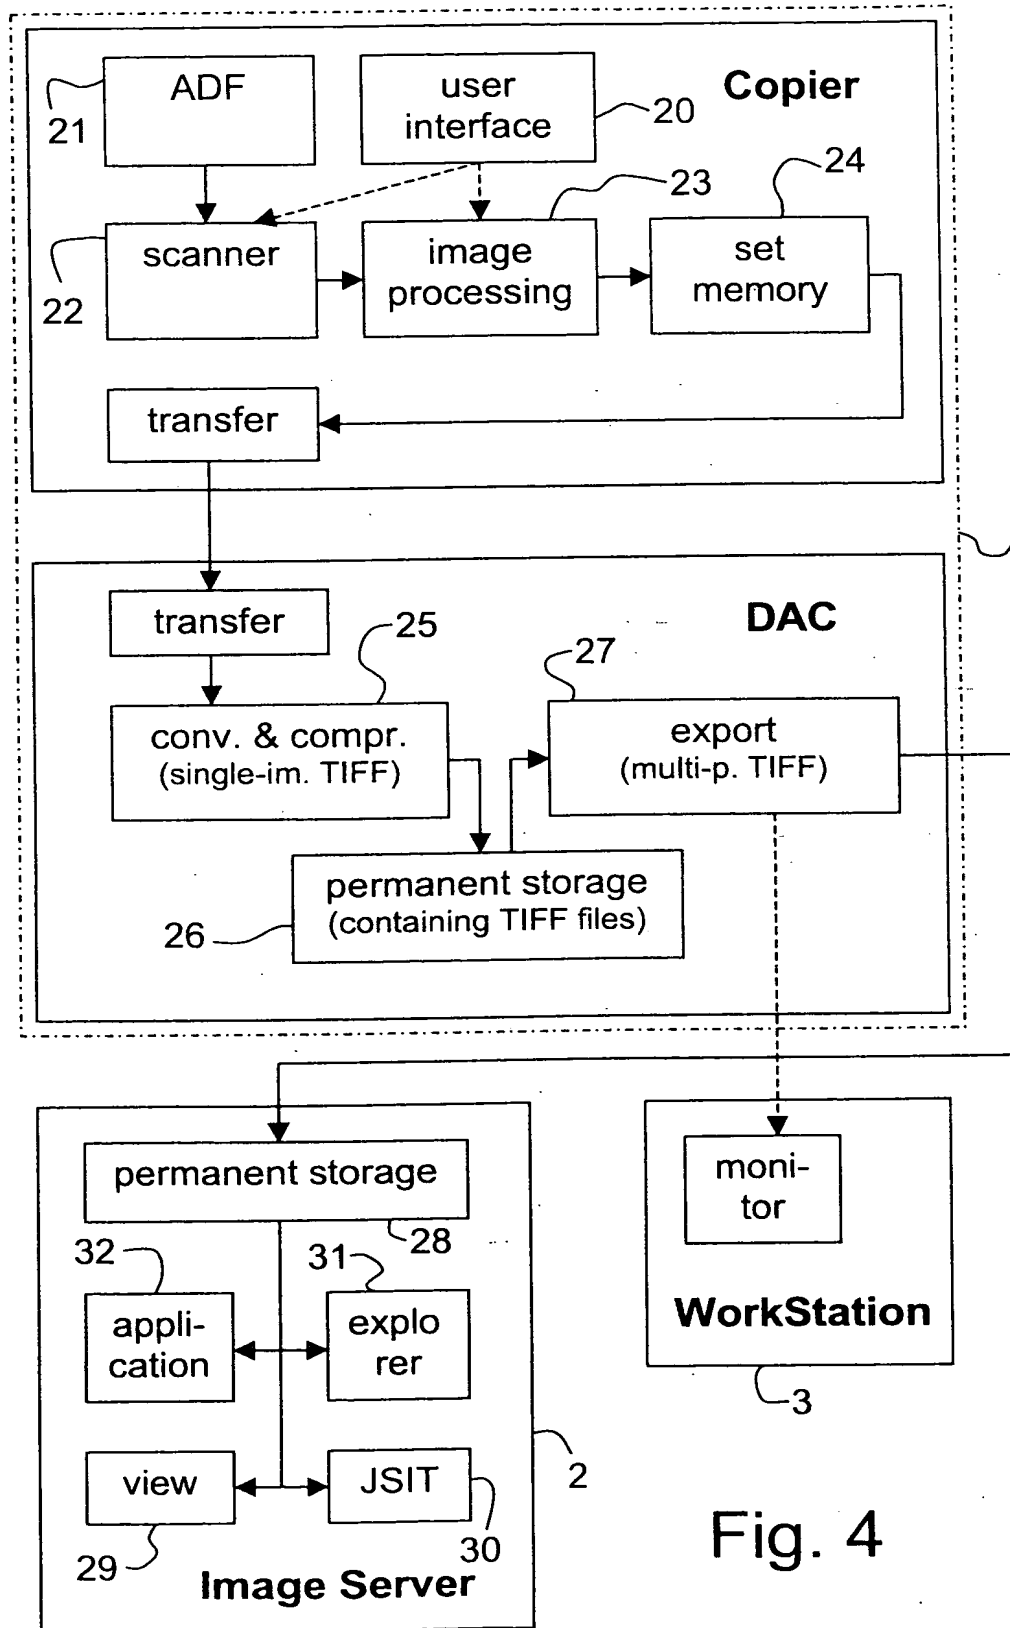


Fig. 4

The control panel features a central display area with the following elements:

- Top Left:** A box labeled "Enter number" with instructions "◇ = continue scan job" and "C = cancel".
- Top Center:** Two buttons labeled "Original" and "Digital document".
- Top Right:** A button labeled "Workflow".
- Center:** A large display showing "Job number" with the value "1 3 7 5 6 2" and a cursor. Below it, the file name "Scan3165_137562_19991016_160055.tif" is displayed.
- Bottom Left:** Three buttons labeled "Scan", "Print", and "Copy".
- Bottom Center:** A section for "Job type" with options "Scan for 316S", "300 dpi", and "600 dpi".
- Bottom Right:** A button labeled "Job type".

Surrounding the display are several other controls:

- Left Side:** Four small rectangular buttons.
- Right Side:** A numeric keypad (0-9), a "C" button, a power button, and a diamond-shaped button with a vertical bar.
- Top:** Four directional arrow buttons (up, down, left, right).

A label "19" with a line points to the "Job number" display area.

FIG. 5

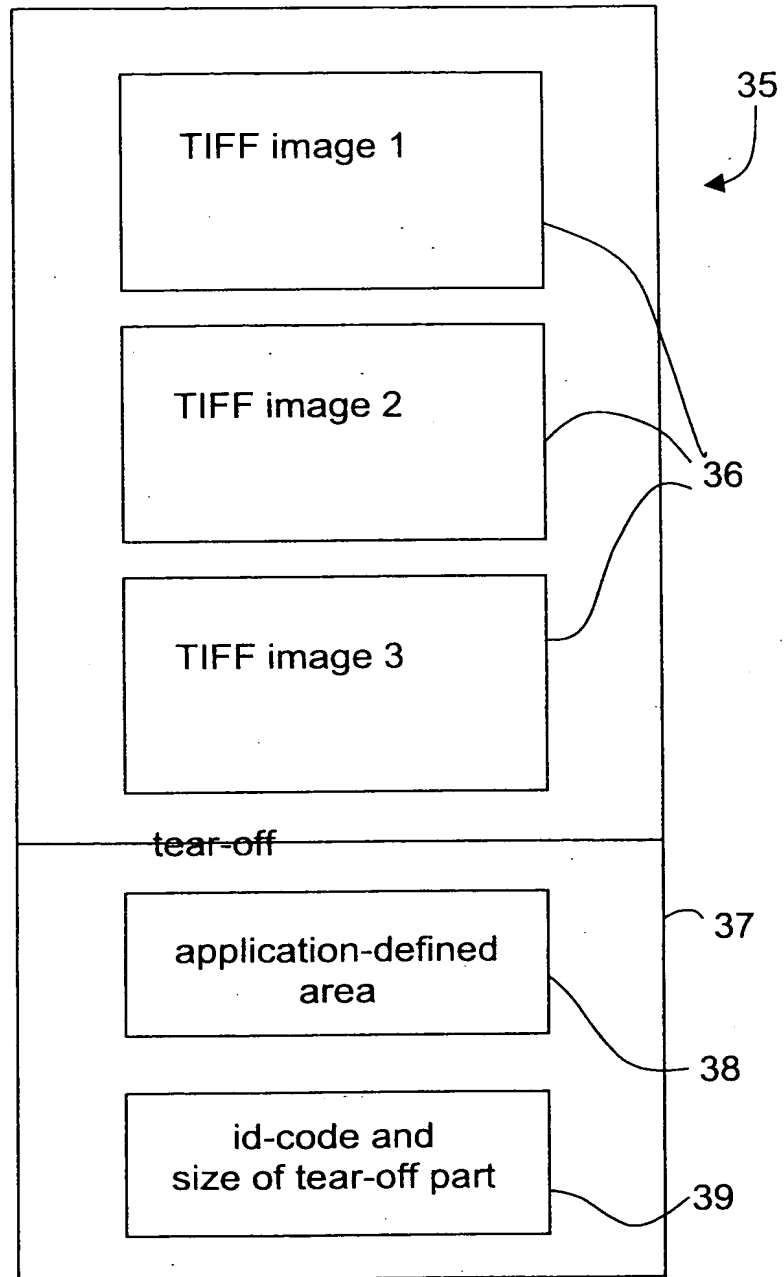


FIG. 6



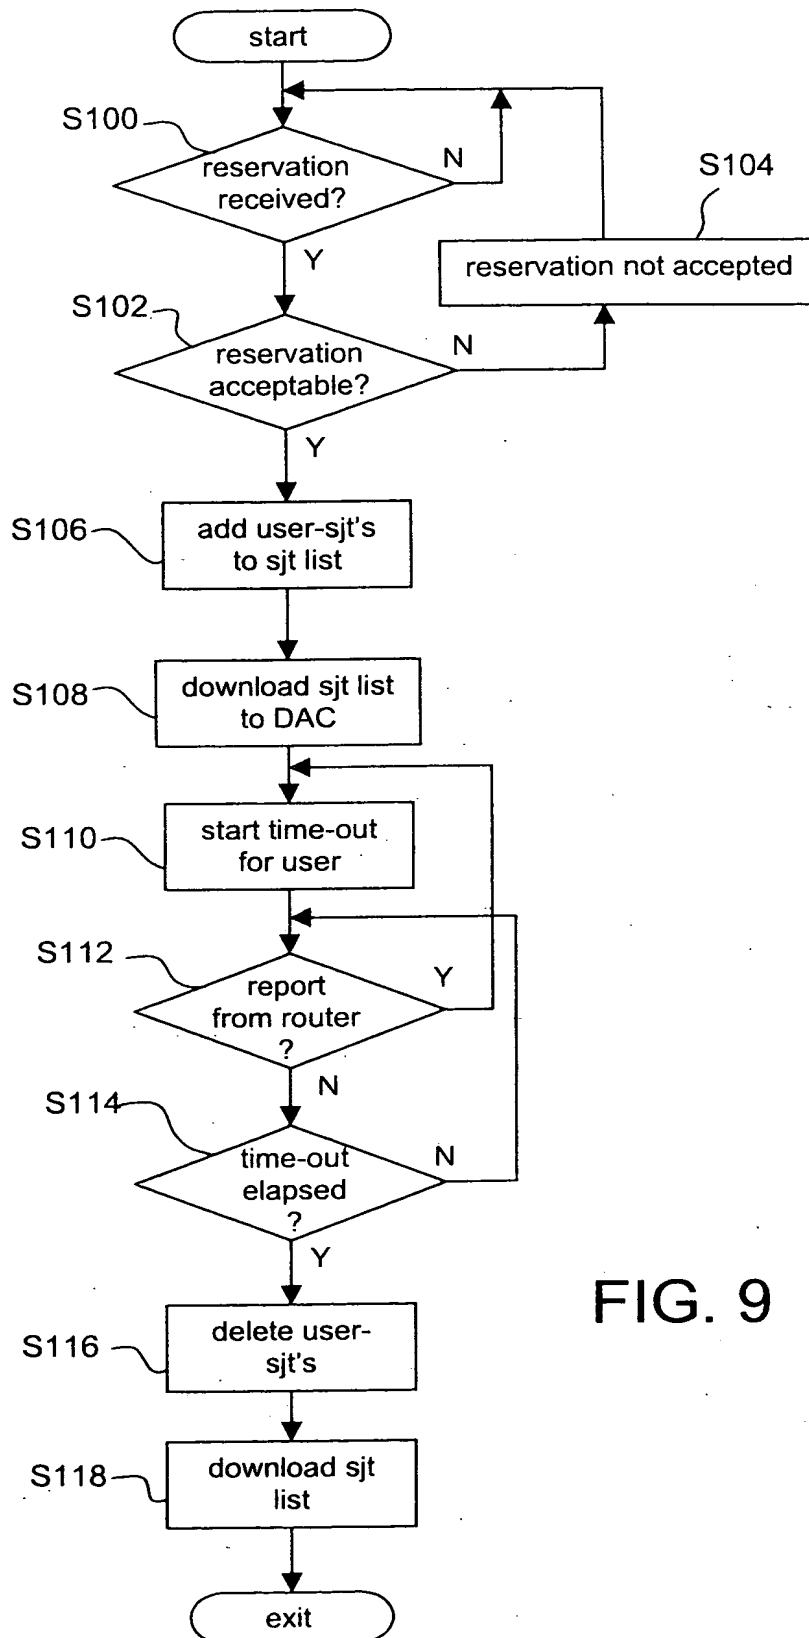


FIG. 9